

Installation guide


XS4 Mini ANSI with cylindrical latch

SALTO
inspiredaccess




Eng **Installation guide**
F **Guide d'installation**
E **Guía de instalación**

C i 250xx.. series
C i 270xx..



CYLINDRICAL LATCH

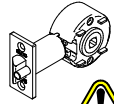


ONLY WITH SALTO CYLINDRICAL LATCH.

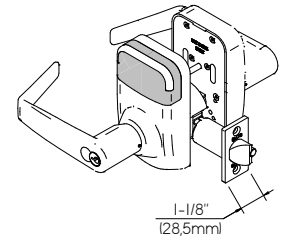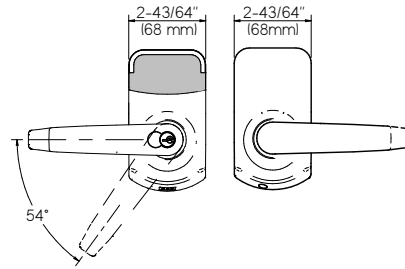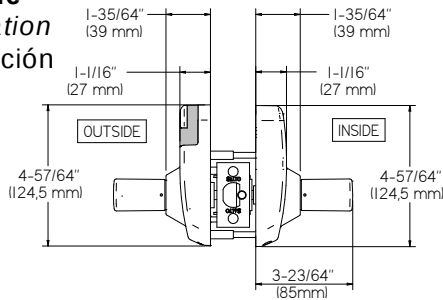

CLUTCH + OVERRIDE MOD.

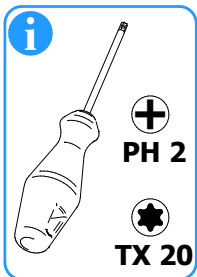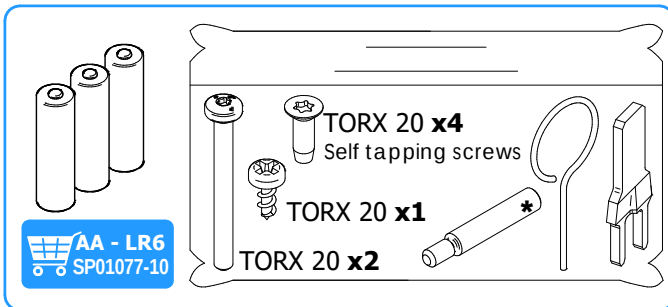


PH 2
TX 20

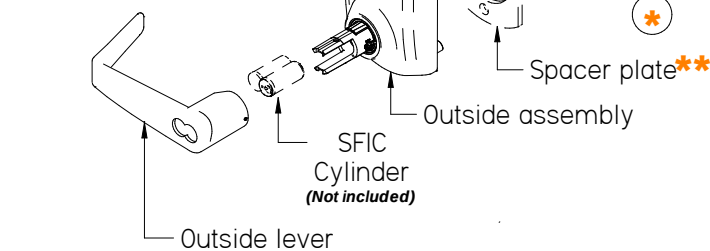


For door preparation, see: 4DS00004 or 4DS00005
Pour préparation de la porte, voir: 4DS00004 ou 4DS00005.
Para mecanizado de puerta, ver: 4DS00004 ó 4DS00005.

Eng **Select handing** F **Choisir le sens de la bêteille** E **Seleccione mano**


OPTION 1: Ci 250 xx series

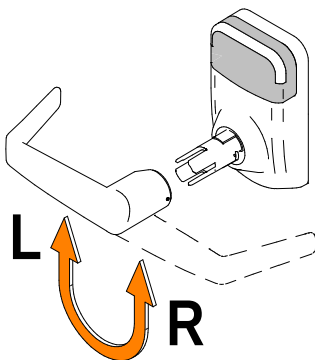


1
L
R

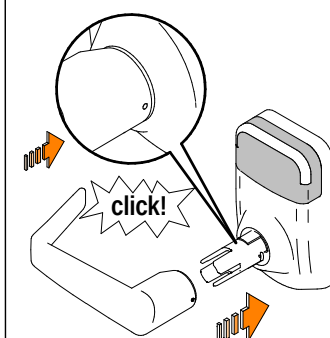


2

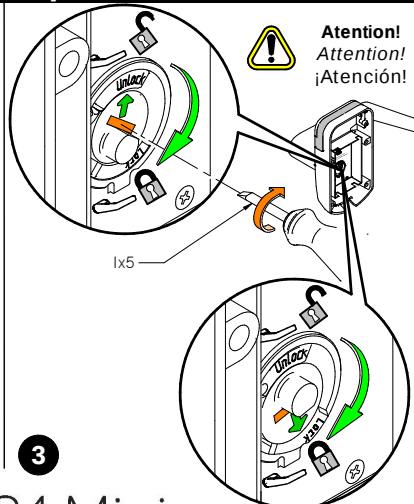

3

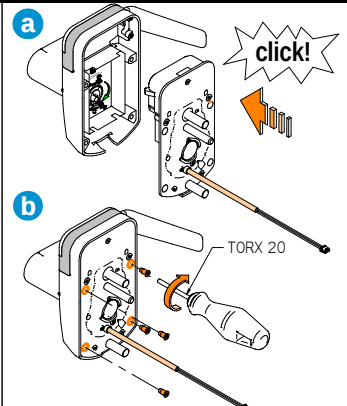

4




XS4 Mini
© 2023 SALTO Systems S.L.

The diagrams illustrate the following steps:

- Step 1: Initial assembly of the handle and lock body.
- Step 2: Inserting the control key into the lock cylinder.
- Step 3: Turning the control key to the right (indicated by an orange arrow).
- Step 4: Inserting the control key into the lock cylinder.
- Step 5: Turning the control key to the left (indicated by an orange arrow).
- Step 6: Inserting the control key into the lock cylinder.
- Step 7: Inserting the user key into the lock cylinder.
- Step 8: Turning the user key to the right (indicated by an orange arrow).
- Step 9: Turning the user key to the left (indicated by an orange arrow).
- Step 10: Inserting the control key into the lock cylinder.
- Step 11: Turning the control key to the right (indicated by an orange arrow).

The diagrams also include labels for 'LH' (Left Hand) and 'RH' (Right Hand) modes, and a warning icon for step 9.

Eng Installation **F Installation** **E Instalación**

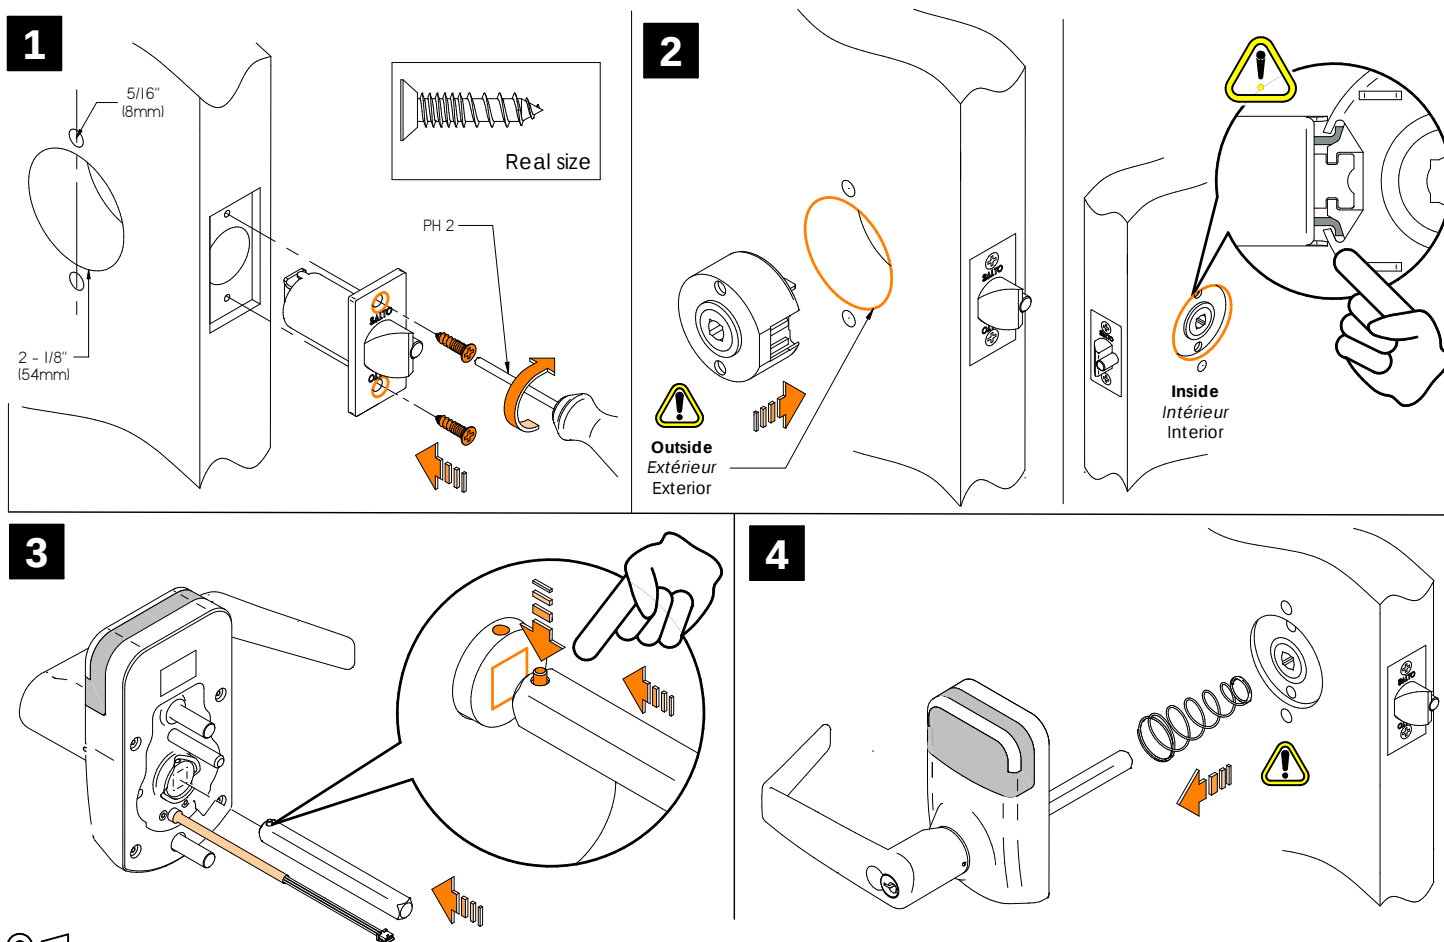


Installation guide


XS4 Mini ANSI with cylindrical latch

SALTO
inspiredaccess


5

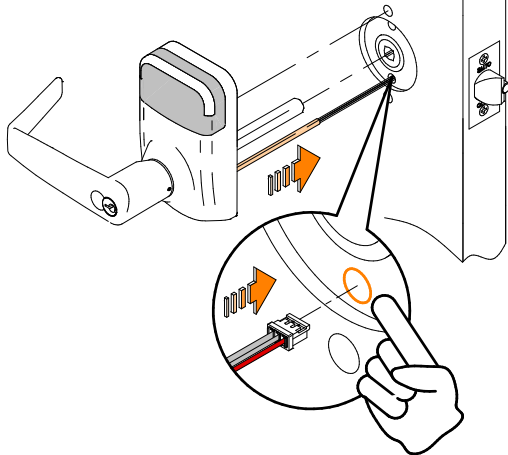

NOT OK

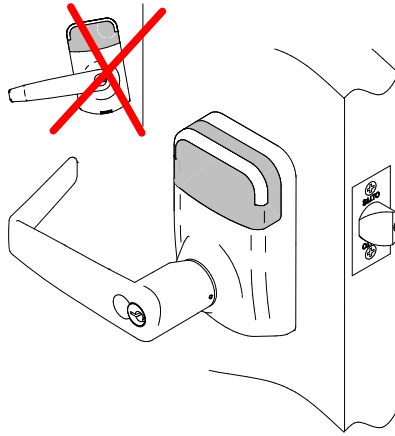


6

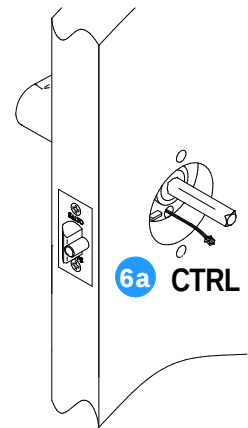

6a CTRL


6

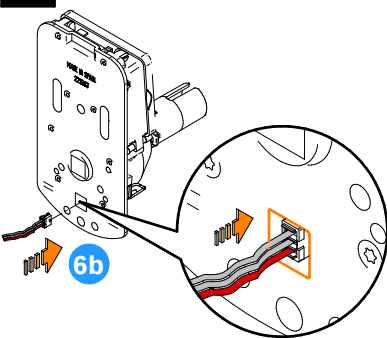


6b

6c

CTRL

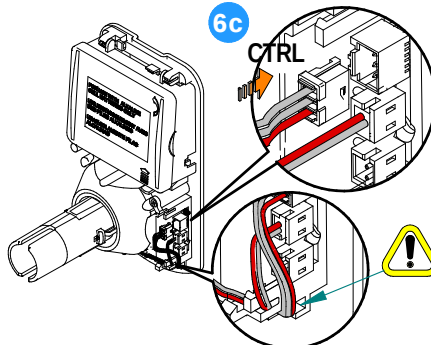


7

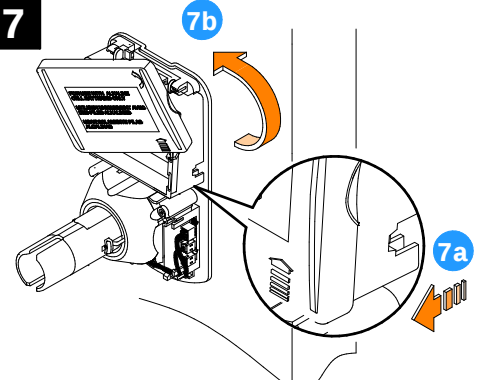

7b

7a

8

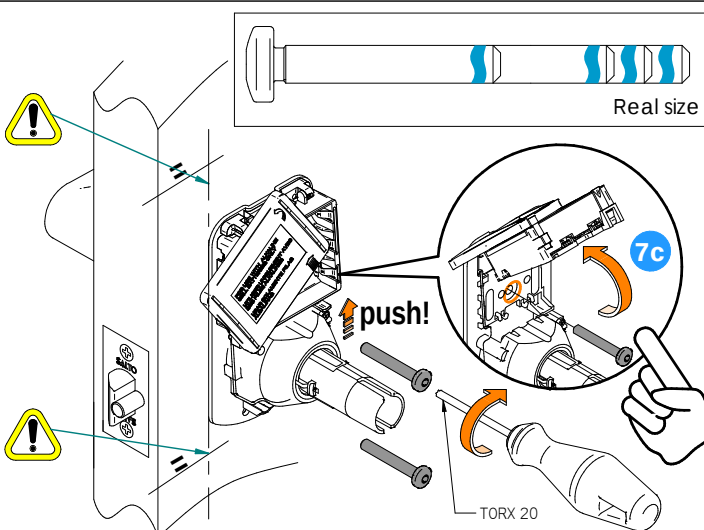


Real size

push!

7c


TORX 20

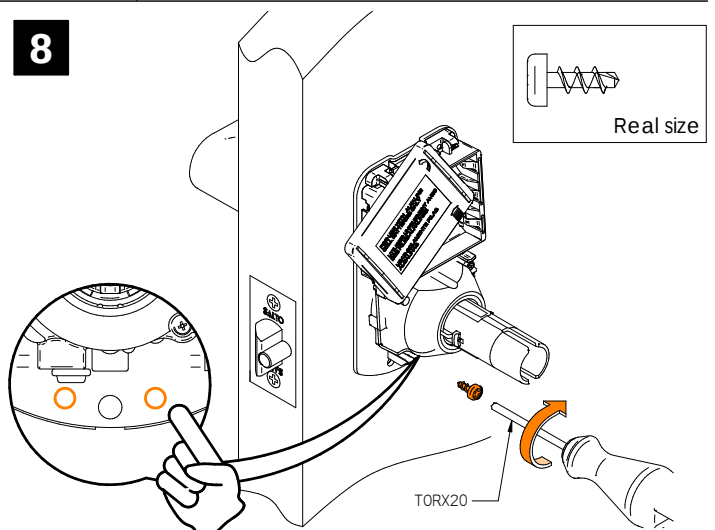

Real size

TORX20


9

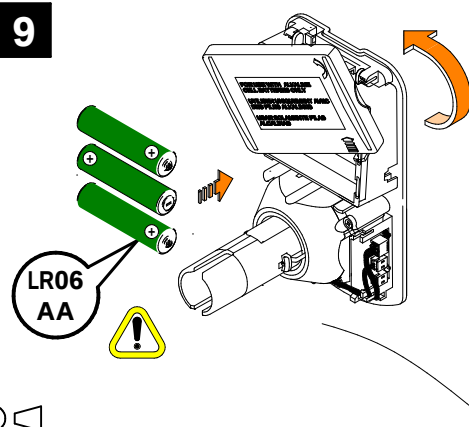

LR06 AA



10

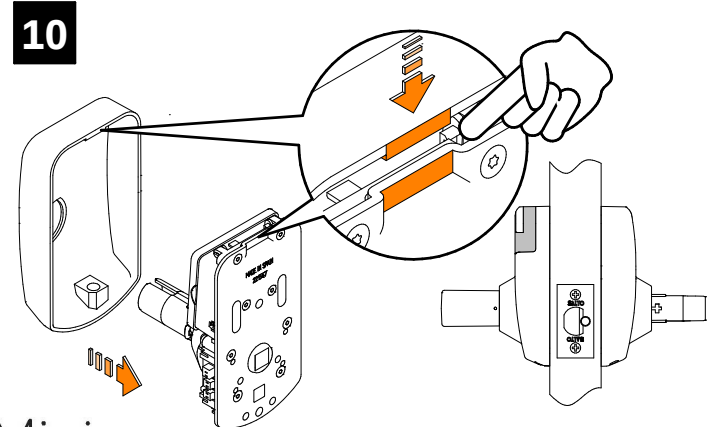


Installation guide


XS4 Mini ANSI with cylindrical latch

SALTO
inspiredaccess

11

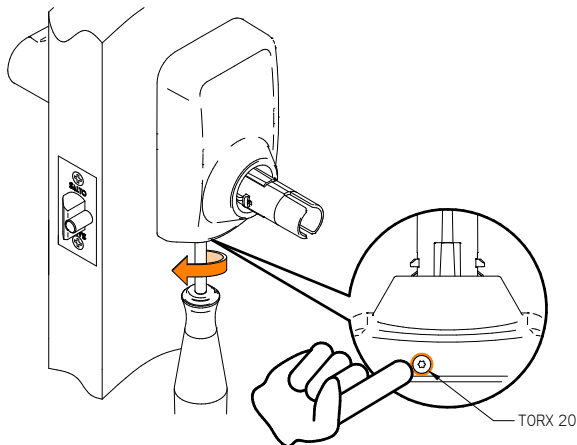


12

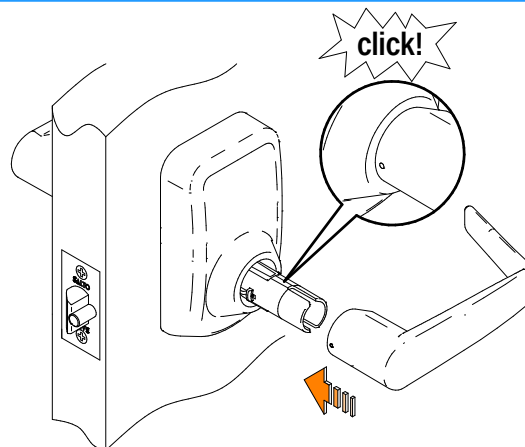


Eng Door detector **F Détecteur de porte** **E Detector de puerta**

! Only for models with door detector/Uniquement pour les modèles avec détecteur de porte/Solo para modelos con detector de puerta.

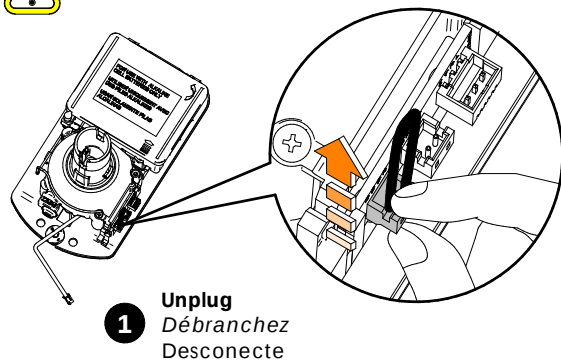

1 Unplug
Débranchez
Desconecte




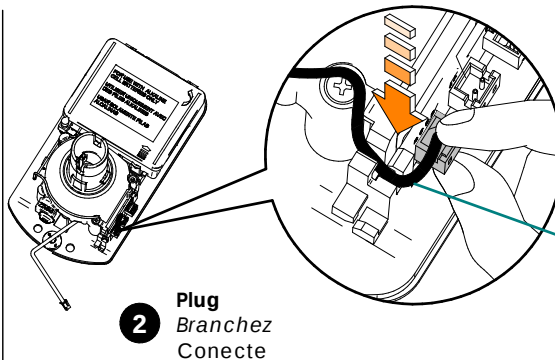


2 Plug
Branchez
Conecte

(***) Wood door detector model.
(***) Modèle détecteur de porte en bois.
(***) Modelo detector de puerta madera.

For installation, see: 225469. / Pour installation, voir: 225469. / Para instalación, ver. 225469.

Eng Battery change **F Remplacer les piles** **E Sustitución de las pilas**

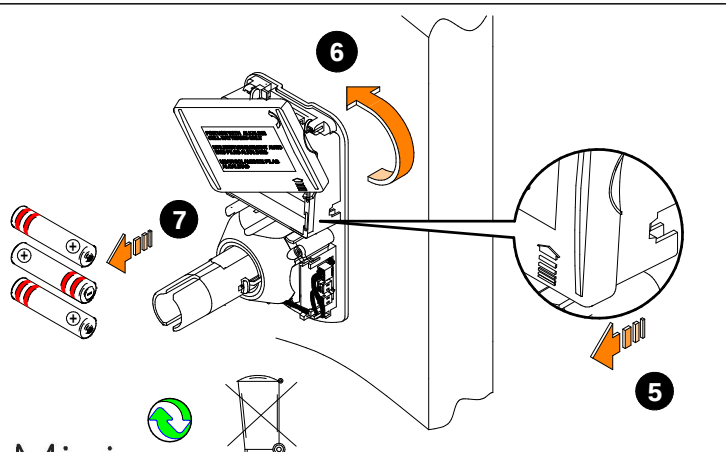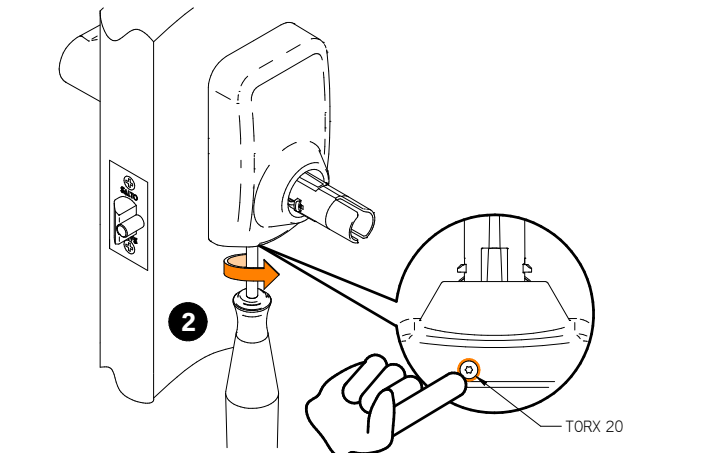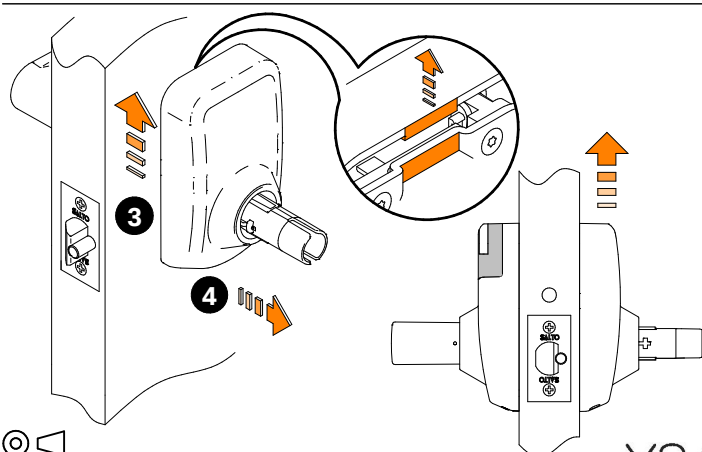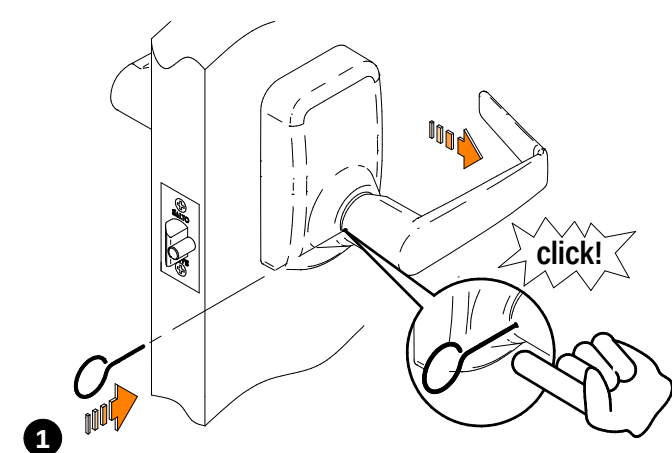

XS4 Mini
© 2023 SALTO Systems S.L.

All contents current at time of publication.
SALTO Systems S.L. reserves the right to change availability of any item in this catalog, its design, construction, and/or materials.

4/4 227229-ED.1- 19/10/2023